


The ease of installation with ROCKWOOD...


1. Design your wall...

Before you begin, develop a plan for the retaining wall including steps, tiered sections, branched walls and setbacks. Consider driveways, utilities, structures, permanent trees and vegetation.

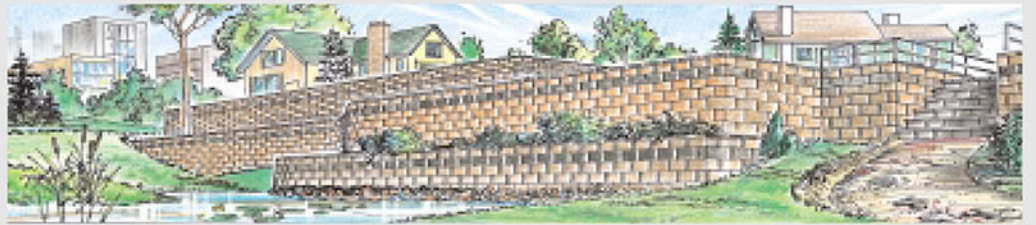

2. Prepare the site...

Review ROCKWOOD's Installation Manual. An important component of your retaining wall, the base should be prepared according to the instructions provided in the manual.

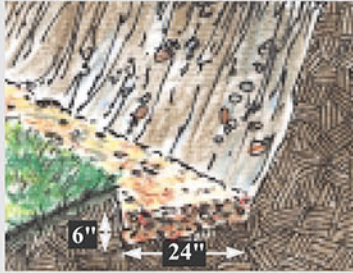

3. Set the base units...

Begin at the lowest wall elevation, and place the units on the base material so that the bottom of each unit is in full contact with the base material.




4. Install the first course...

Each unit is placed beside each other for the wall's full length. The sides of each unit should touch the adjacent unit.



5. Backfill the first course...

After the first course is laid in position, backfill between and behind the units with unit fill.

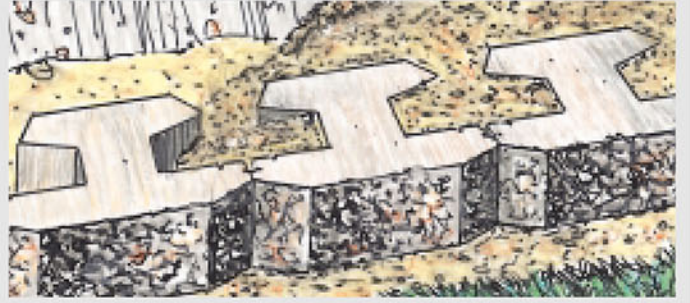

6. Install successive courses...

Lay up succeeding courses making sure that the anchor bar of each unit on the upper course is laid against the backside of the two faces of the lower course. Use geogrid as required.



7. Apply the finishing touches...

After the final course is laid, the wall may be finished by adding caps. Caps vary by manufacturer. Consult your ROCKWOOD representative.

